


# SAFETY POSTER


## INSTRUCTIONS FOR THE SAFE HANDLING OF YOUR CUTTING TOOL

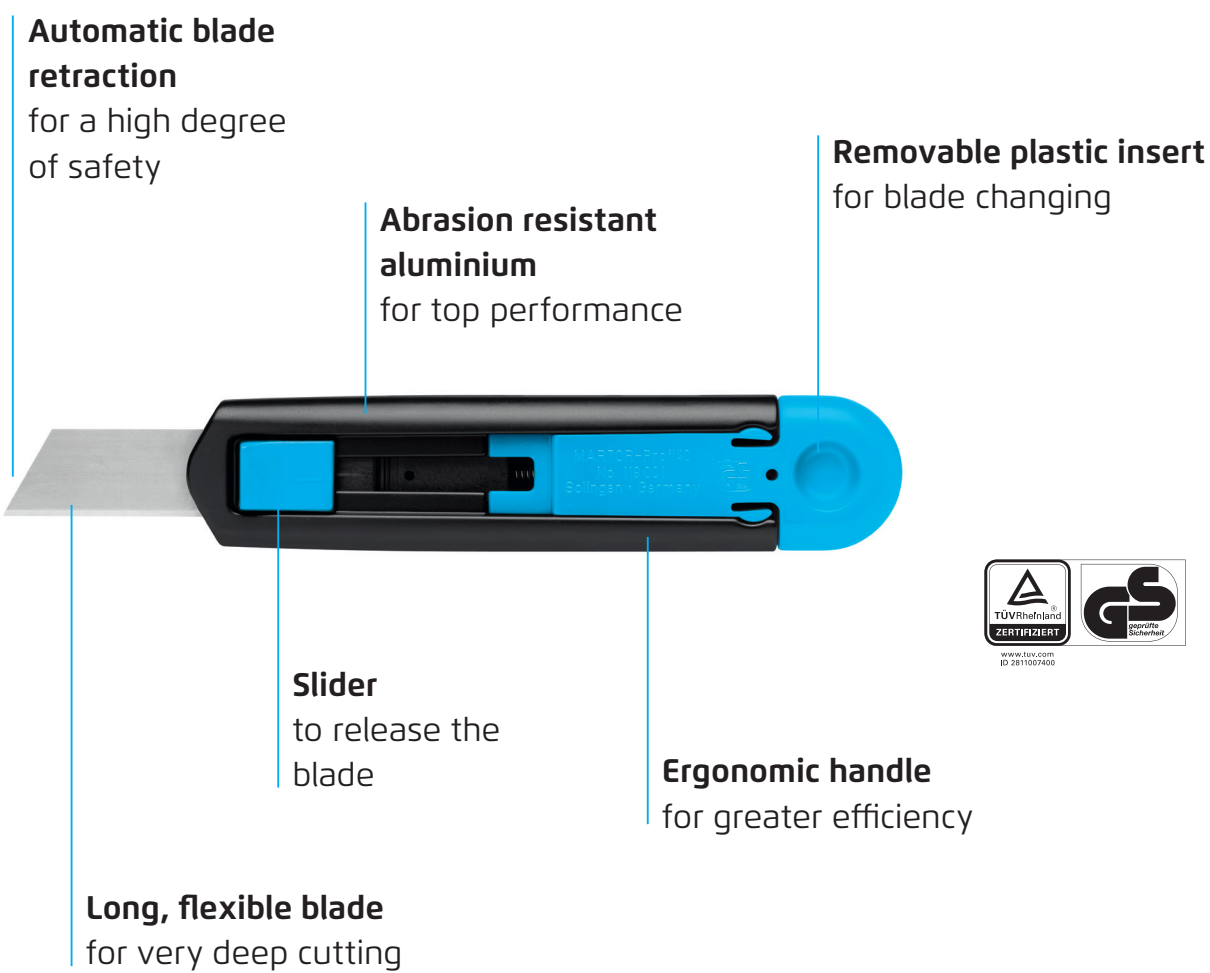


### SECUNORM PROFI40




### USAGE

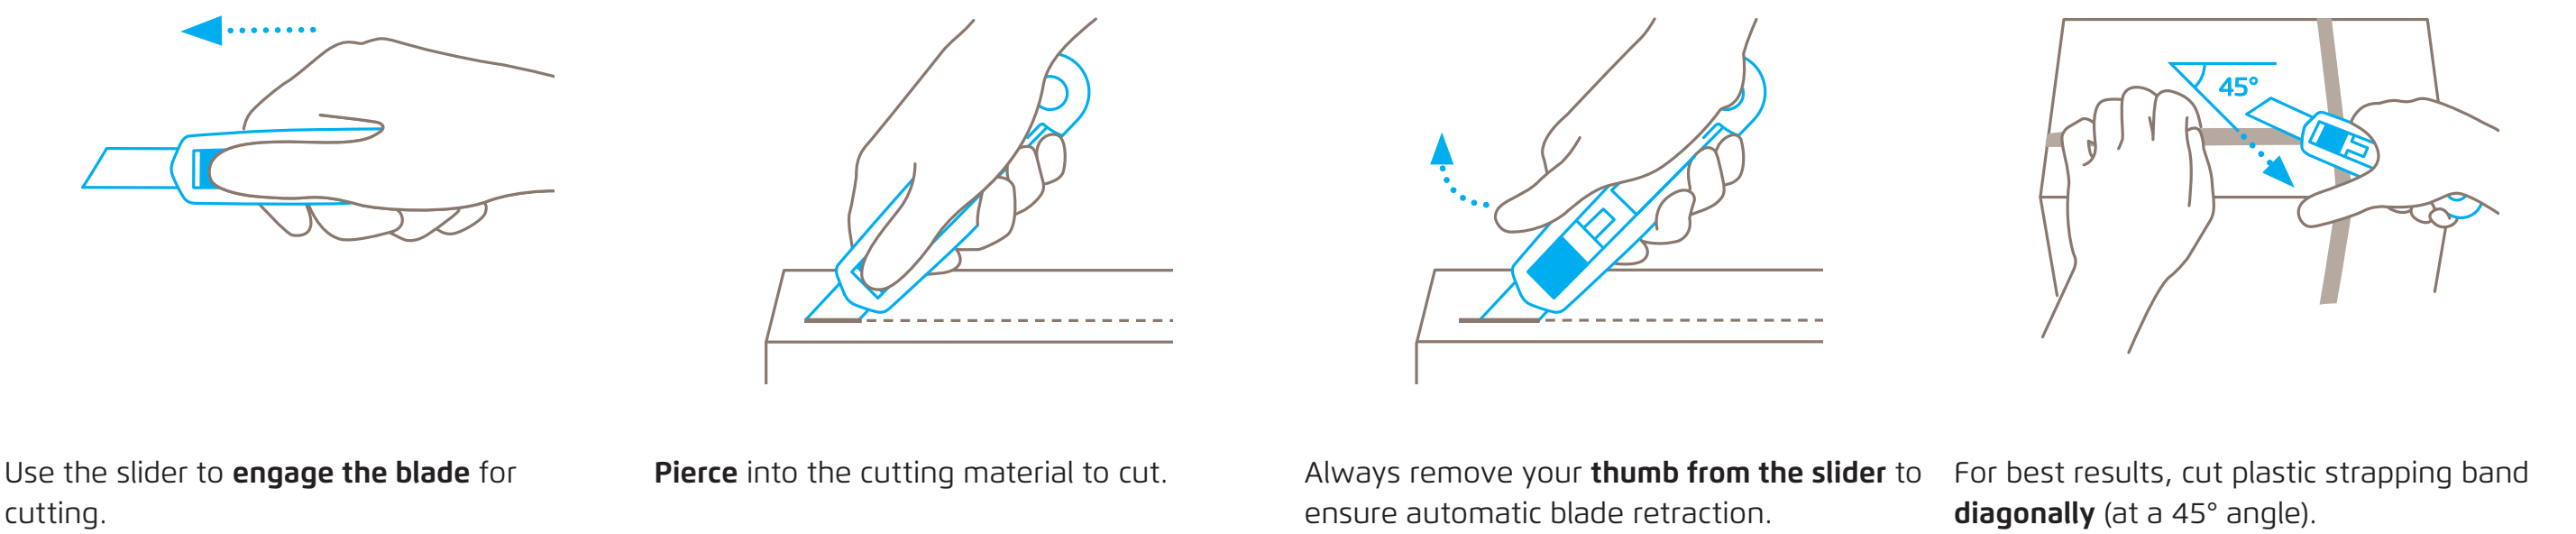

### BLADE CHANGE

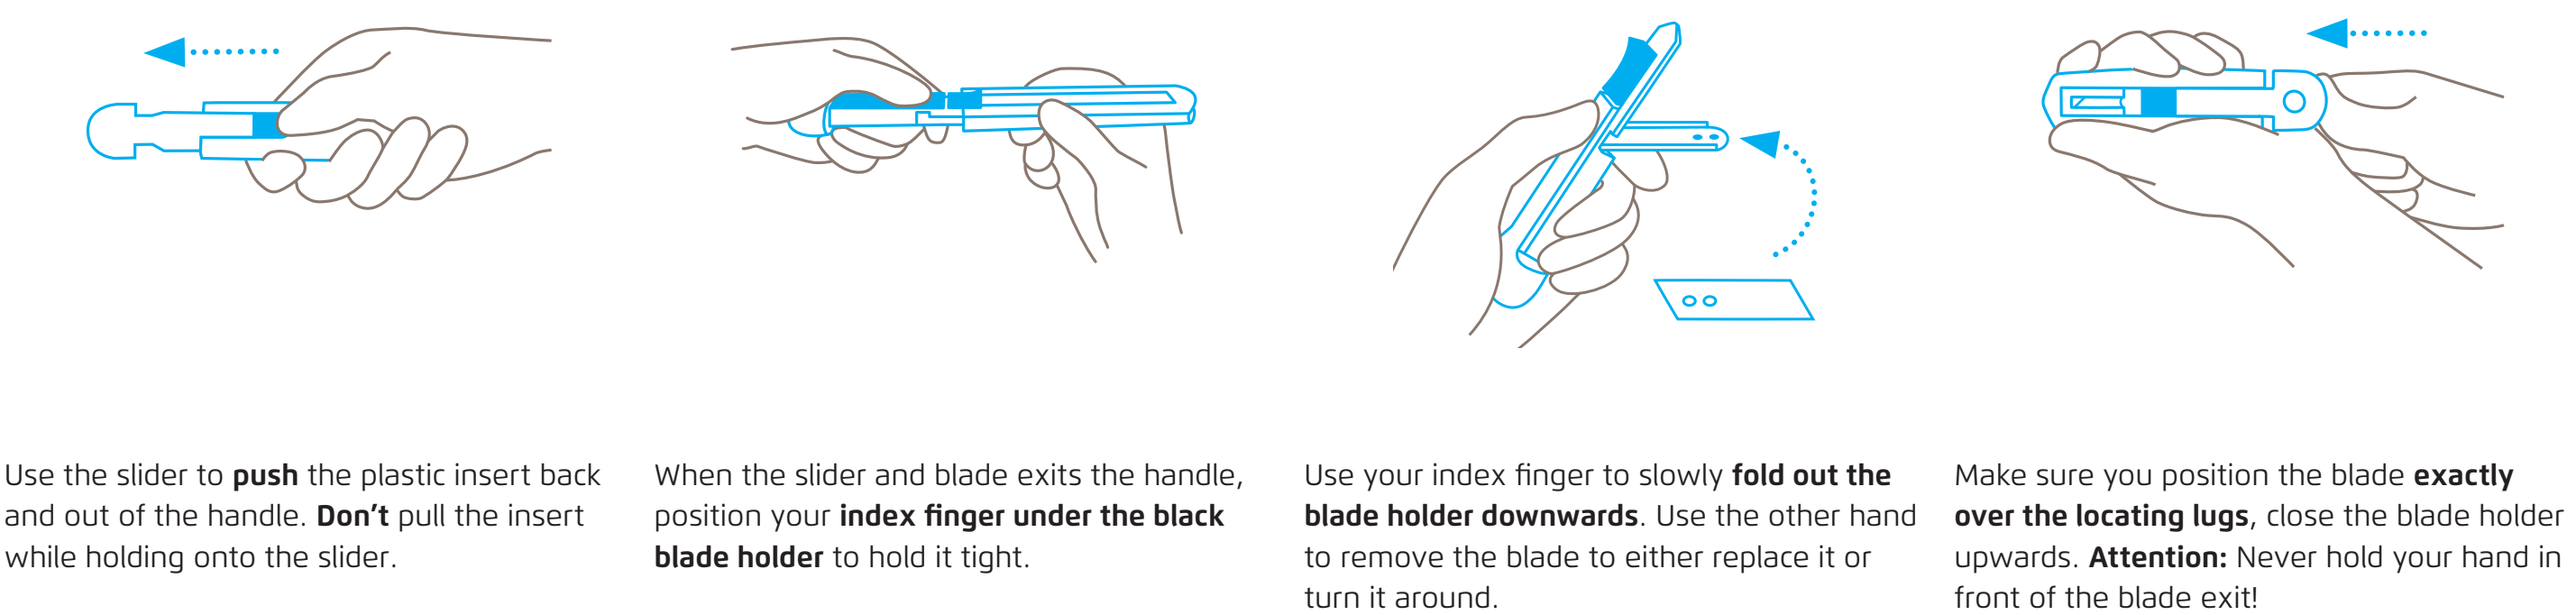


### PROTECTION OF USER

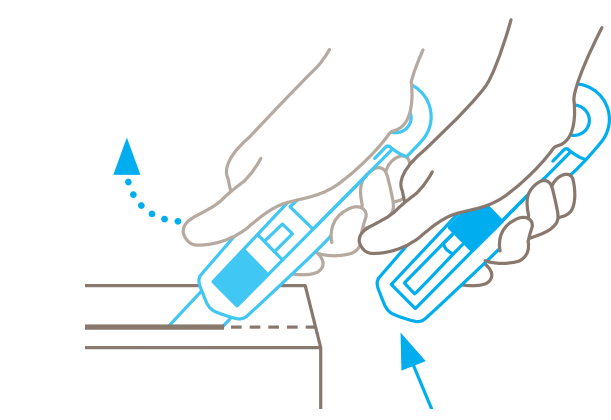

Following cutting, the blade immediately retracts into the handle. Condition: you have **released hold of the slider**.

### DISPOSAL

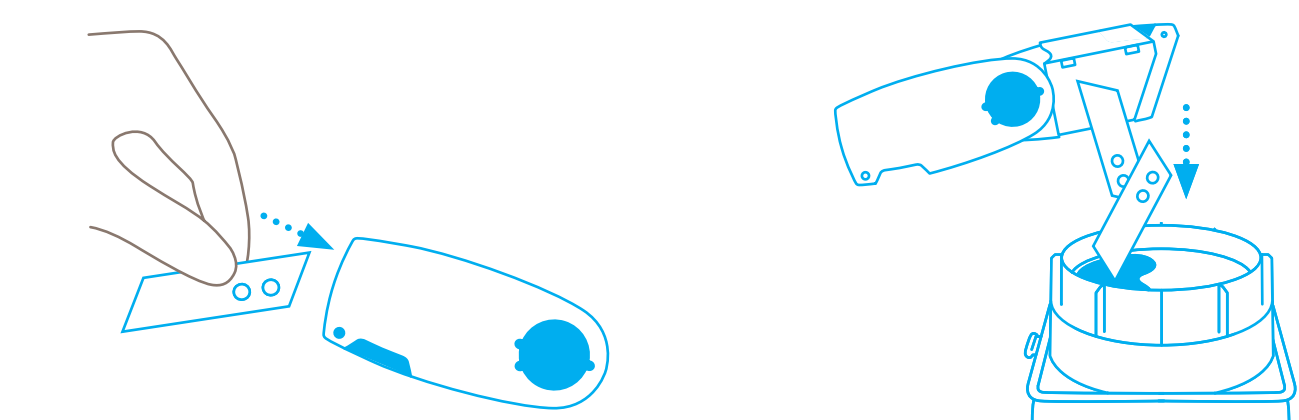

Your **SAFEBOX** is the best place to store **used blades**.

When the **SAFEBOX** is full, **empty all contents** into your **USED BLADE CONTAINER**.

**Please note:** To ensure your product always functions flawlessly, regularly remove any impurities. For additional safety, we recommend wearing gloves.